


User Level Driver (ULD) Common Library Package Version 6.0.0 Release Notes

Original: November 2003

0890539-6.0.0

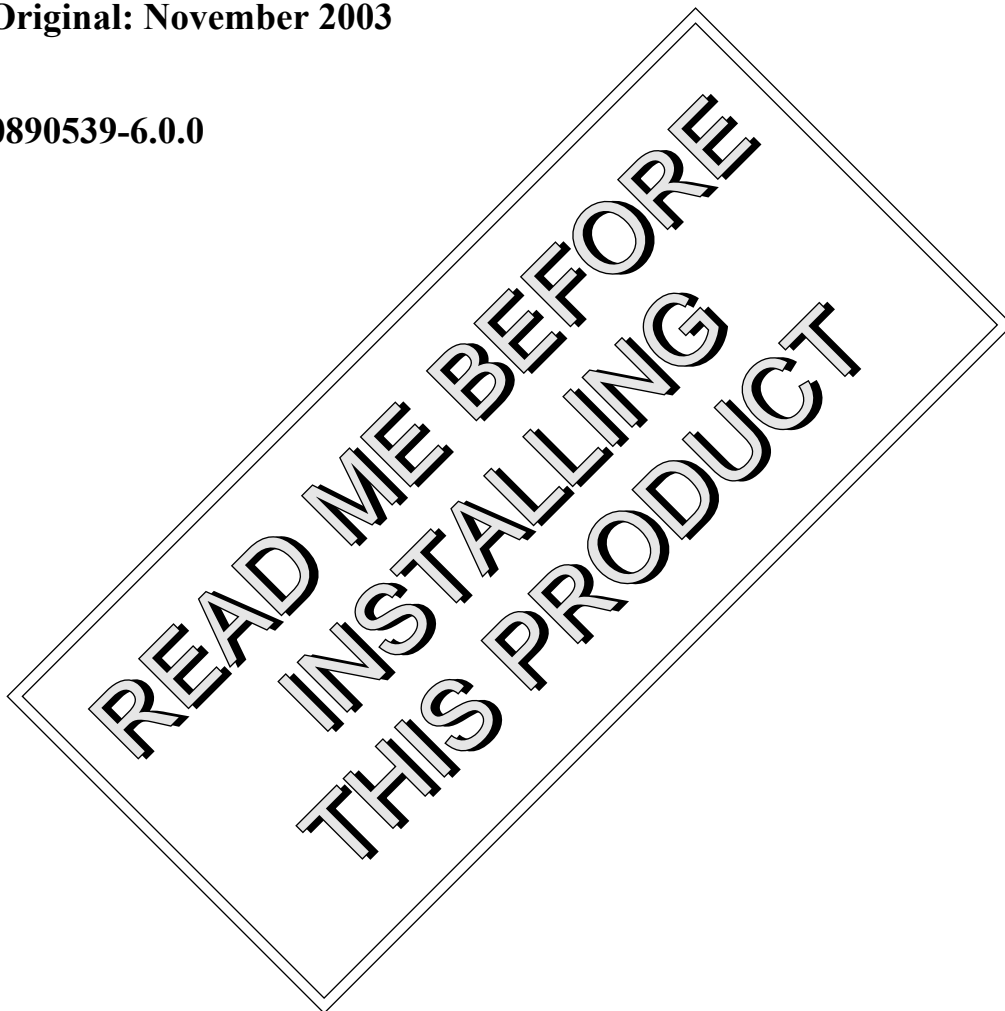

Disclaimer

The information contained in this document is subject to change without notice. Concurrent Computer Corporation has taken efforts to remove errors from this document, however, Concurrent Computer Corporation's only liability regarding errors that may still exist is to correct said errors upon their being made known to Concurrent Computer Corporation.

License

Duplication of this manual without the written consent of Concurrent Computer Corporation is prohibited. Any copy of this manual reproduced with permission must include the Concurrent Computer Corporation copyright notice.

Trademark Acknowledgments

PowerWorks, PowerMAX OS, and Power Hawk are trademarks of Concurrent Computer Corporation. All other trademarks are the property of the respective owners.

Contents

| | |
|---|---|
| 1.0. Introduction | 1 |
| 2.0. Documentation | 1 |
| 3.0. Prerequisites | 2 |
| 3.1. Software | 2 |
| 4.0. Syntax Notation | 2 |
| 5.0. Installation Procedures | 3 |
| 5.1. ULD Common Library Installation Procedures | 3 |
| 5.1.1. Installation from 4mm DAT | 3 |
| 5.1.2. Installation from CD-ROM | 3 |
| 5.1.3. Removing the ULC Common Library. | 5 |
| 6.0. Direct Software Support | 6 |

1.0. Introduction

This document provides instructions for installing the ULD common library package on PowerHawk Series 900 Computer Systems running PowerMAX OS 6.0. This is a pre-requisite package for the VMIVME 3122 user level driver for PowerMAX OS 6.0

2.0. Documentation

The `uld_common(7)` man page is provided by Concurrent Computer Corporation with this product.

3.0. Prerequisites

The following prerequisites apply to the ULD Common Library package.

3.1. Software

- PowerMAX OS Release 6.0 or later.

4.0. Syntax Notation

The following notation is used throughout this manual:

| | |
|------------------|--|
| <i>italic</i> | Books, reference cards, and items that the user must specify appear in <i>italic</i> type. Special terms may also appear in <i>italics</i> . |
| list bold | User input appears in list bold type and must be entered exactly as shown. Names of directories, files, commands, options and system manual page references also appear in list bold type. |
| list | Operating system and program output such as prompts and messages and listings of files and programs appear in list type. |
| [] | Brackets enclose command options and arguments that are optional. You do not type the brackets if you choose to specify such options or arguments |

5.0. Installation Procedures

5.1. ULD Common Library Installation Procedures

This section includes the following:

- Installing the ULD Common Library package from 4mm DAT.
- Installing the ULD Common Library package from CD-ROM.
- Configuring and compiling the ULD Common Library.
- Removing the ULD Common Library from the system.

5.1.1. Installation from 4mm DAT

As the root user perform the following steps:

1. If a version of the ULD Common already exists on this system, issue the `pkgrm (1M)` command and confirm to the command that the `uld_common-5xx` package is to be removed. (Note: this step can be followed to remove the driver regardless of whether a new version is to be installed.) Do the following step:

```
pkgrm uld_common-xxx    (where xxx is the OS version)
```

2. Determine tape device name.

```
/usr/bin/getdev
```

3. If tape device does not exist then create tape device:

```
putdev -a tape0 volume="dat tape" cdevice=/dev/rmt/0hf \
      desc="dat drive 0" type=ctape
```

4. Add ULD Common Library Package:

```
pkgadd -d tape0
```

5.1.2. Installation from CD-ROM

Note:

The system must be configured with the **gr** (generic CD-ROM device driver) and **cdfs** (CD-ROM filesystem) modules and an entry must exist for the CD-ROM device nodes in `/etc/conf/node.d/gr`.

In the example shown below, the CD-ROM device is `/dev/cd/0`, the CD-ROM disc is mounted under `/mnt/cdrom` and the commands are performed by the root user.

Perform the following steps as root user:

1. If a version of the ULD common already exists on this system, issue the `pkgrm (1M)` command and confirm to the command that the `uld_common-xxx` package is to be removed. (Note: this step can be followed to remove the driver regardless of whether a new version is to be installed.)

```
pkgrm uld_common-xxx
```

where xxx is PMAX OS version.

2. Insert the PowerWorks Optional Products disc into the CD-ROM drive and mount the file system as shown below:

```
mkdir /mnt/cdrom  
mount -F cdfs -r /dev/cd/0 /mnt/cdrom
```

3. Get a list of the packages on the CD-ROM disc and verify that the package you wish to install is on the CD-ROM disc.

```
pkginfo -d /mnt/cdrom/pkgs.dstream
```

4. Multiple packages may be installed at once by specifying more than one package name, as in:

```
pkgadd -d /mnt/cdrom/pkgs.dstream uld_common-600\  
v2510-600
```

5. The package(s) to be installed may be selected from a menu of all the packages available on the CD-ROM disc by not specifying any package name, as in:

```
pkgadd -d /mnt/cdrom/pkgs.dstream
```

NOTES:

Once this ULD library is installed, make sure to install updated versions of the ULD drivers that are compatible with the installed ULD library.

The installed version of this ULD library can be obtained by performing a "`pkginfo -l`" on the `uld_common-xxx` package and checking the `VERSION` parameter or looking at the variable "`ULD_LIB_VERSION`" in the include file `/usr/src/udrivers/lib/uld_common/uld_common.h` in the installed directory.

The version number ULD library that are supported by the individual ULD drivers can be verified by "`pkginfo -l`" on the ULD driver package and checking the `VERSION` parameter.

5.1.3. Removing the ULC Common Library.

As the root user issue the following command:

```
#>/usr/sbin/pkgrm uld_common-600
```

6.0. Direct Software Support

Software support is available from a central source. If you need assistance or information about your system, please contact the Concurrent Software Support Center at our toll free number 1-800-245-6453. For calls outside the continental United States, the number is 1-954-283-1822. The Software Support Center operates Monday through Friday from 8 a.m. to 5 p.m., Eastern Standard time. You may submit an online request for assistance at any time by using the Concurrent Computer Corporation web site at http://www.ccur.com/isd_support_contact

Calling the Software Support Center gives you immediate access to a broad range of skilled personnel and guarantees you a prompt response from the person most qualified to assist you. If you have a question requiring on-site assistance or consultation, the Software Support Center staff will arrange for a field analyst to return your call and schedule a visit.